

Assembly Instruction


**AVEN
BERG**

Zahradní ratanová souprava Avenberg
MONOPOLI krémová





Item ID



Z403885


ZA25074

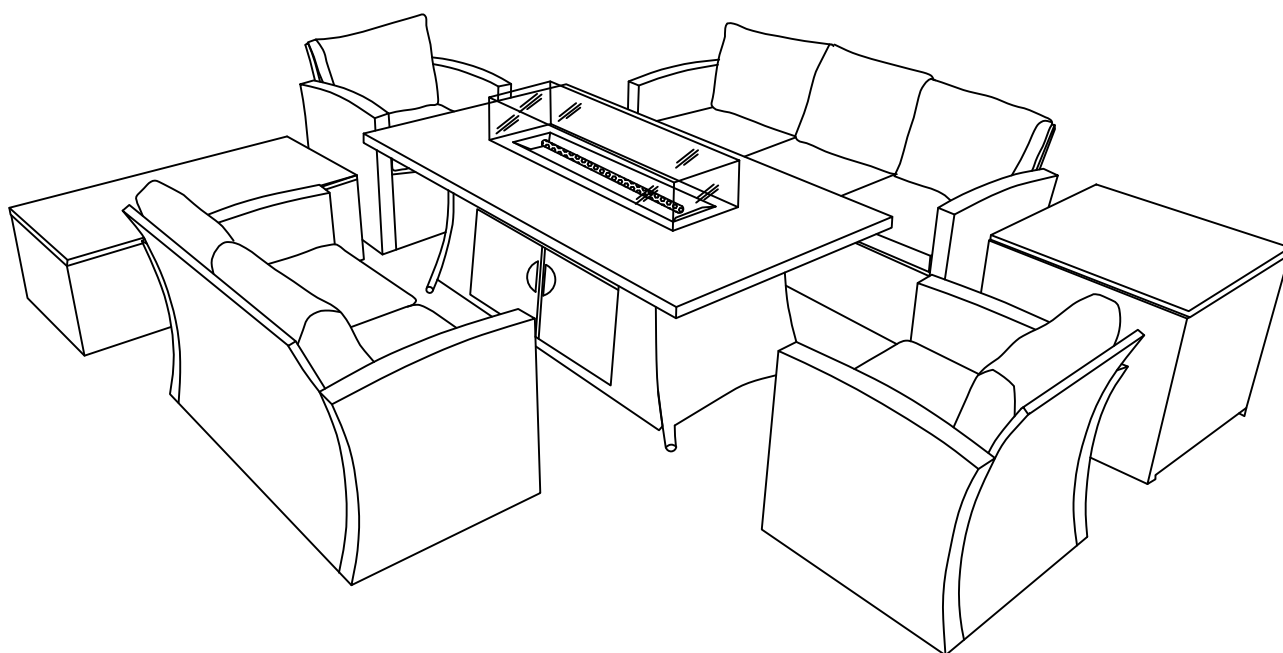


Assembly Instruction

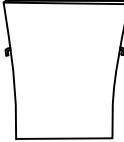A	X2	B	X2	C	X2	D	X2
							
Right Armrest		Left Armrest		Seat		Back	

E	X28	F	X28	G	X1		
							
M6x45mm		M6		M6			


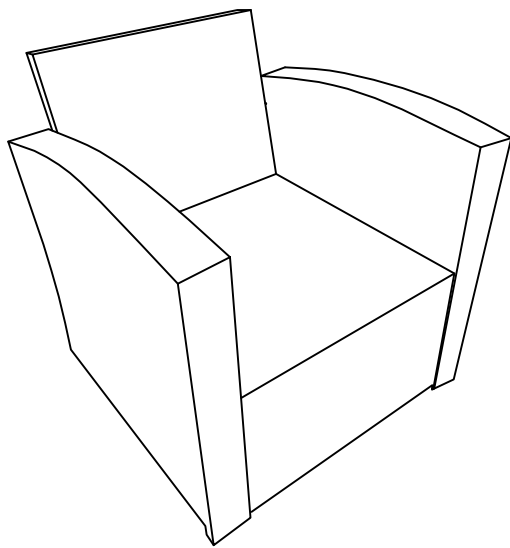


Single Person Sofa


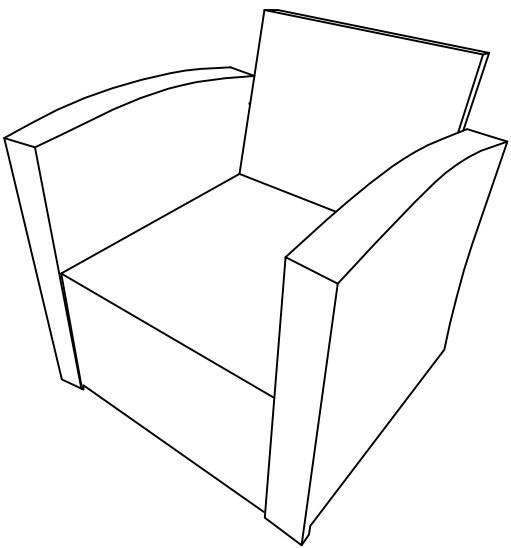


Single Person Sofa


1

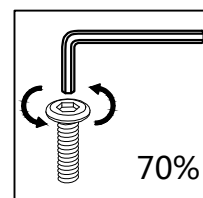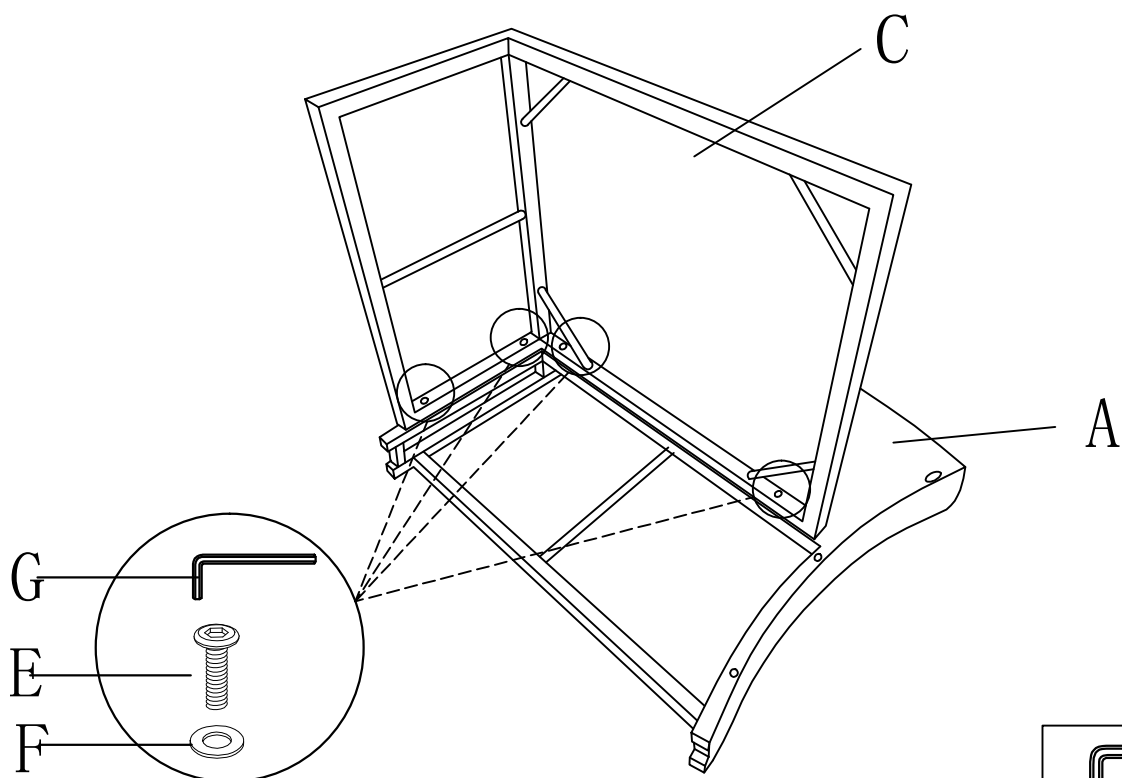


2

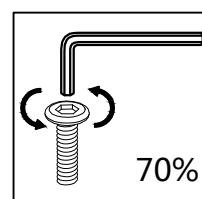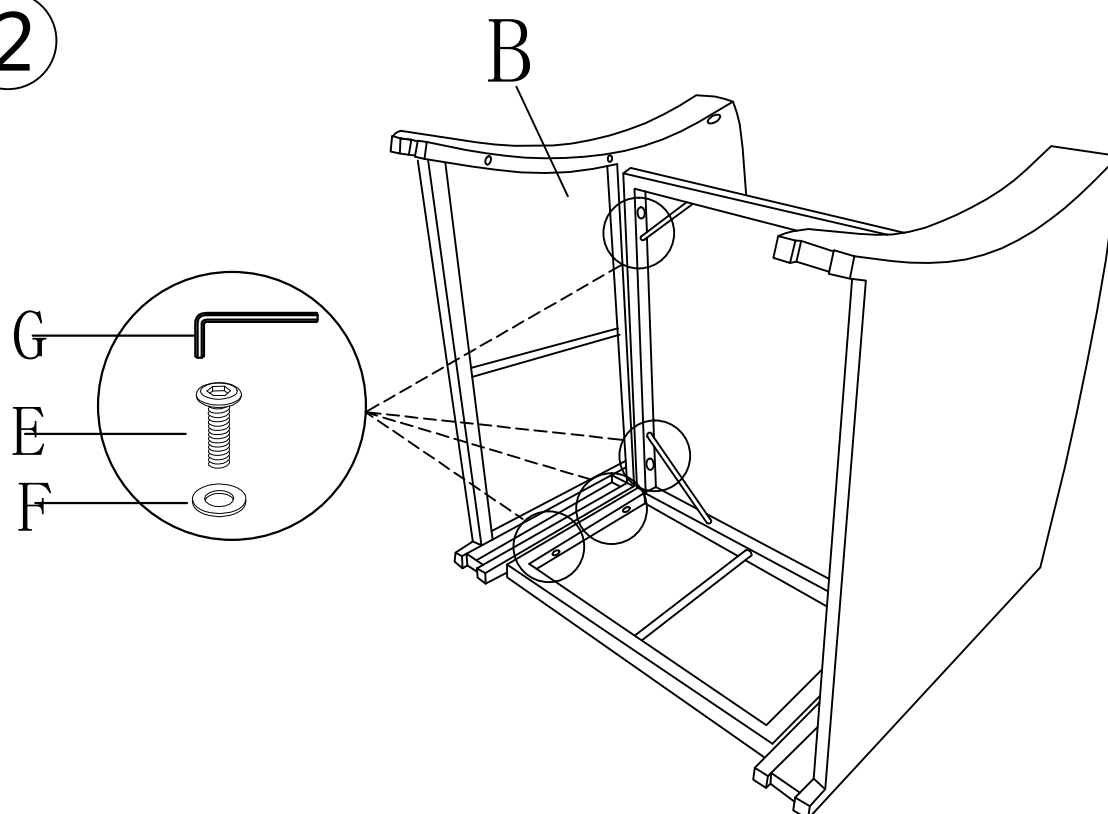




3


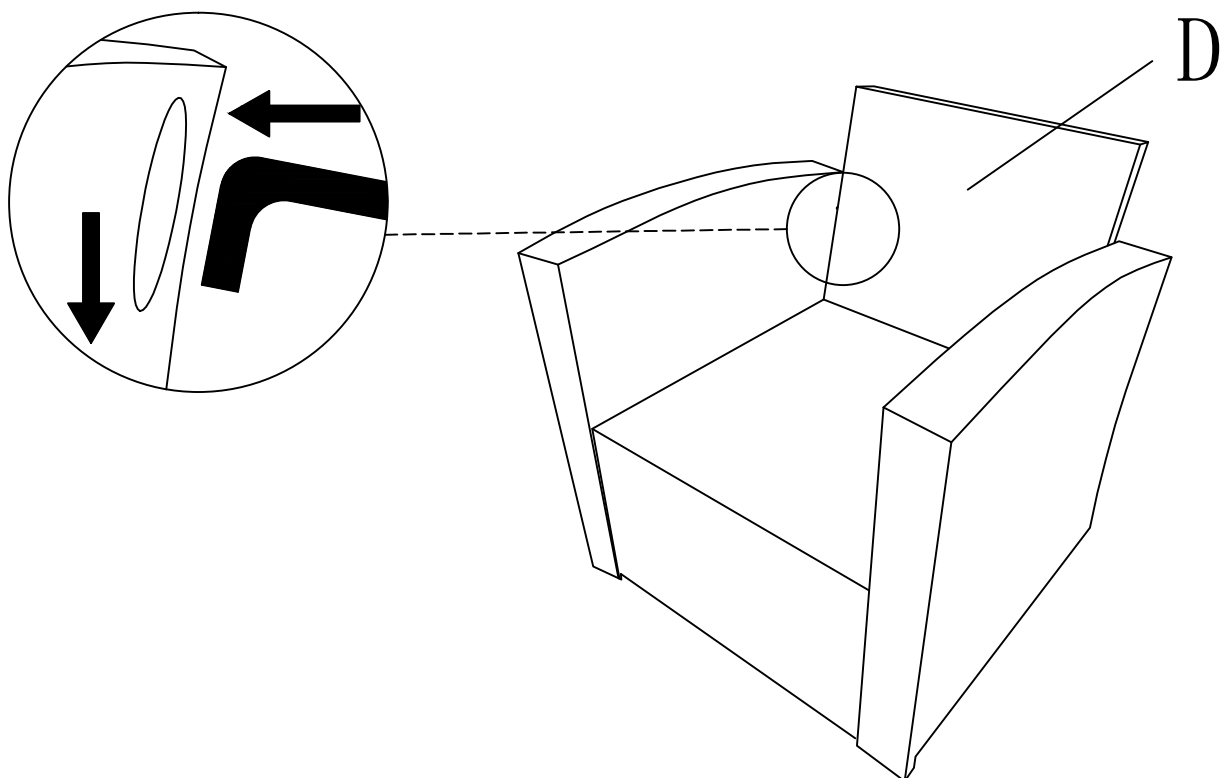


4

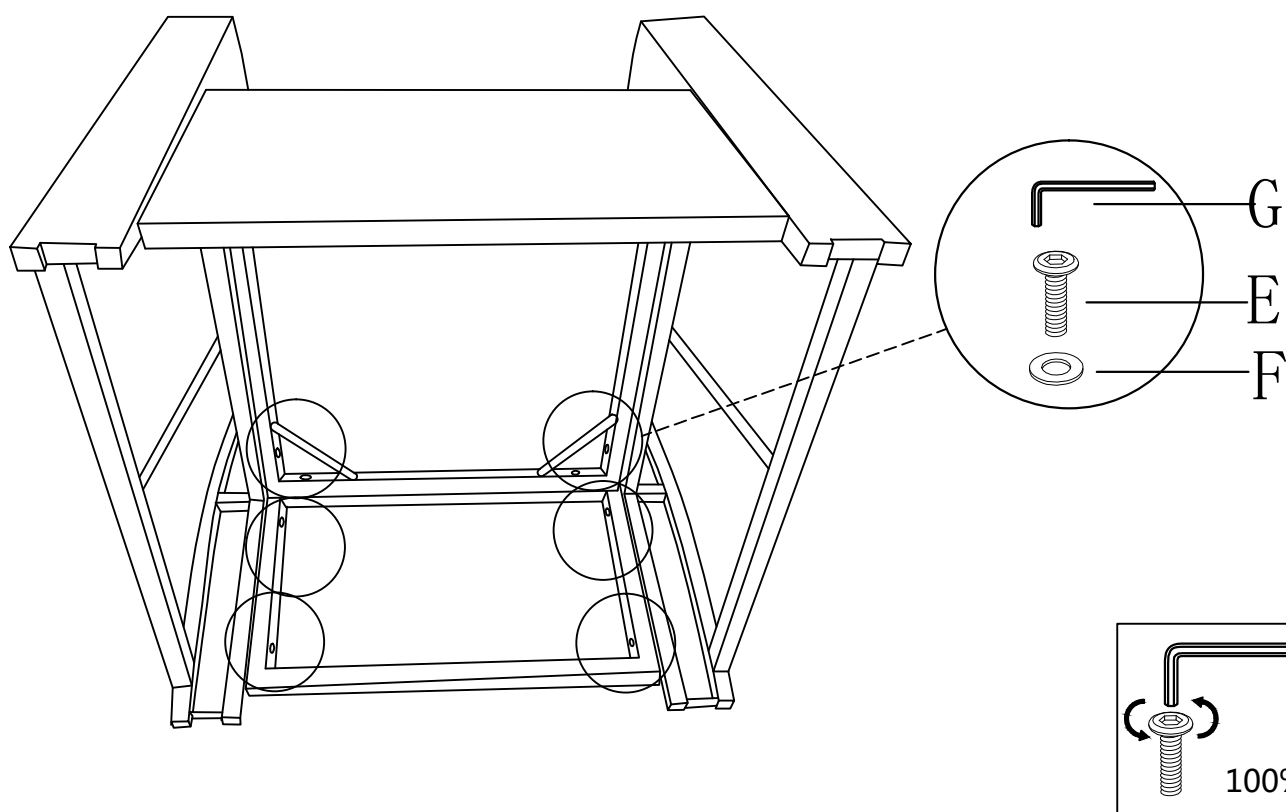


Assembly Instruction


A	X2	B	X2	C	X1	D	X1
							
Right Armrest		Left Armrest		2-Seat		2-Back	

E	X1	F	X1	G	X31	H	X31
							
3-Seat		3-Back		M6x45mm		M6	

I	X1						
							
M6							

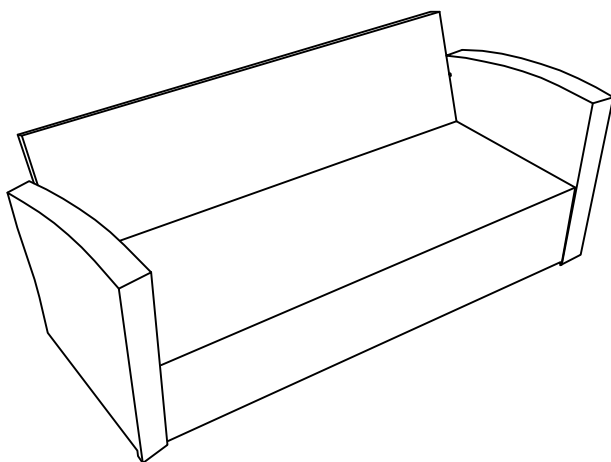


Three-Person Sofa

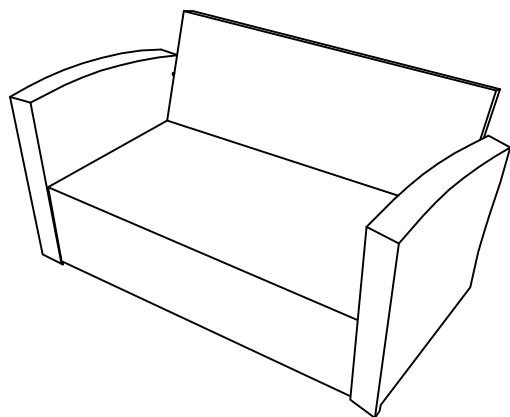


Double Sofe

1

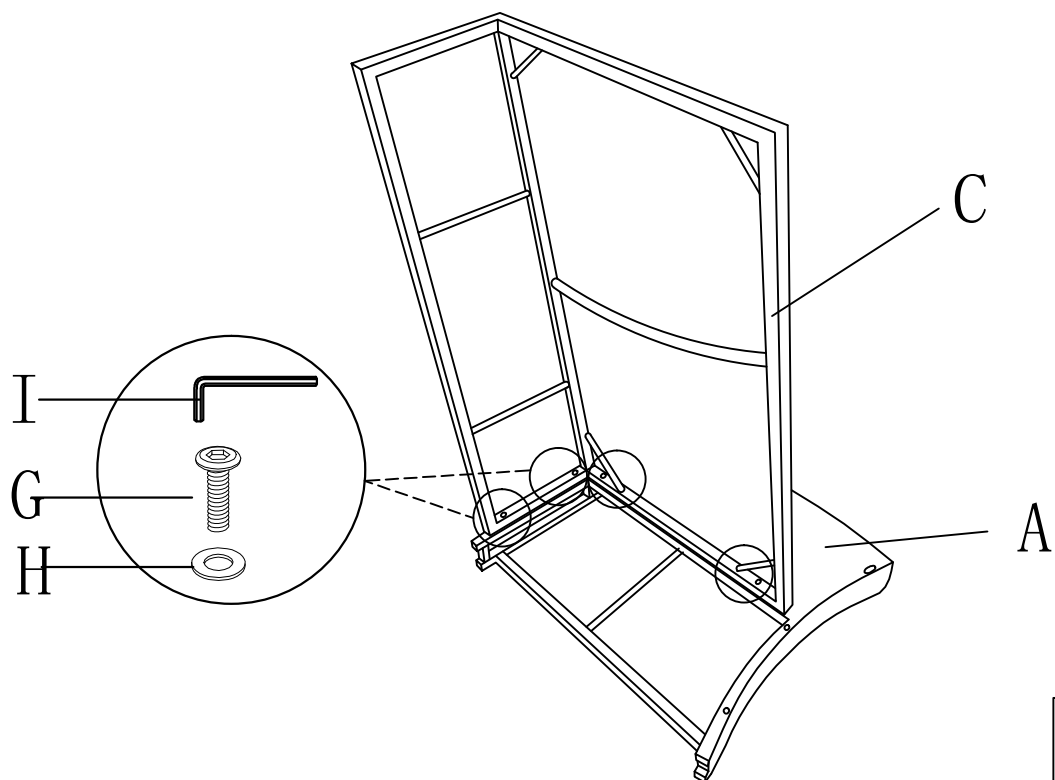


Double Sofe

2

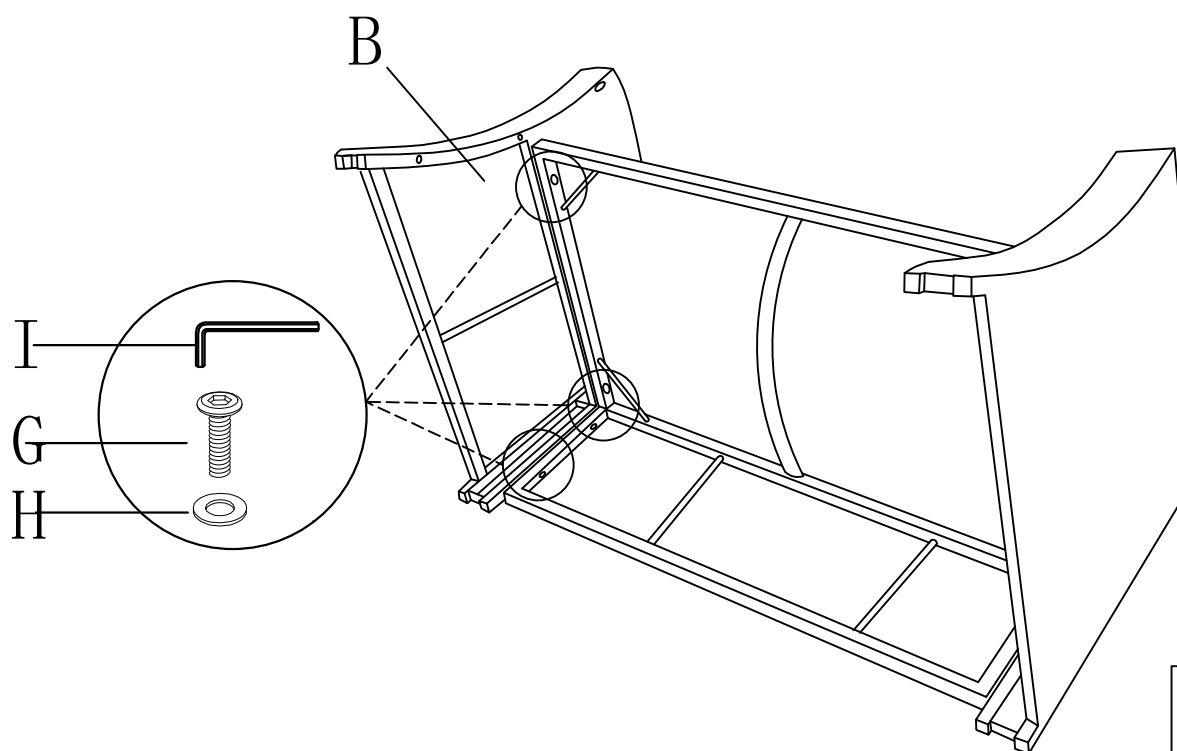


Double Sofe

3

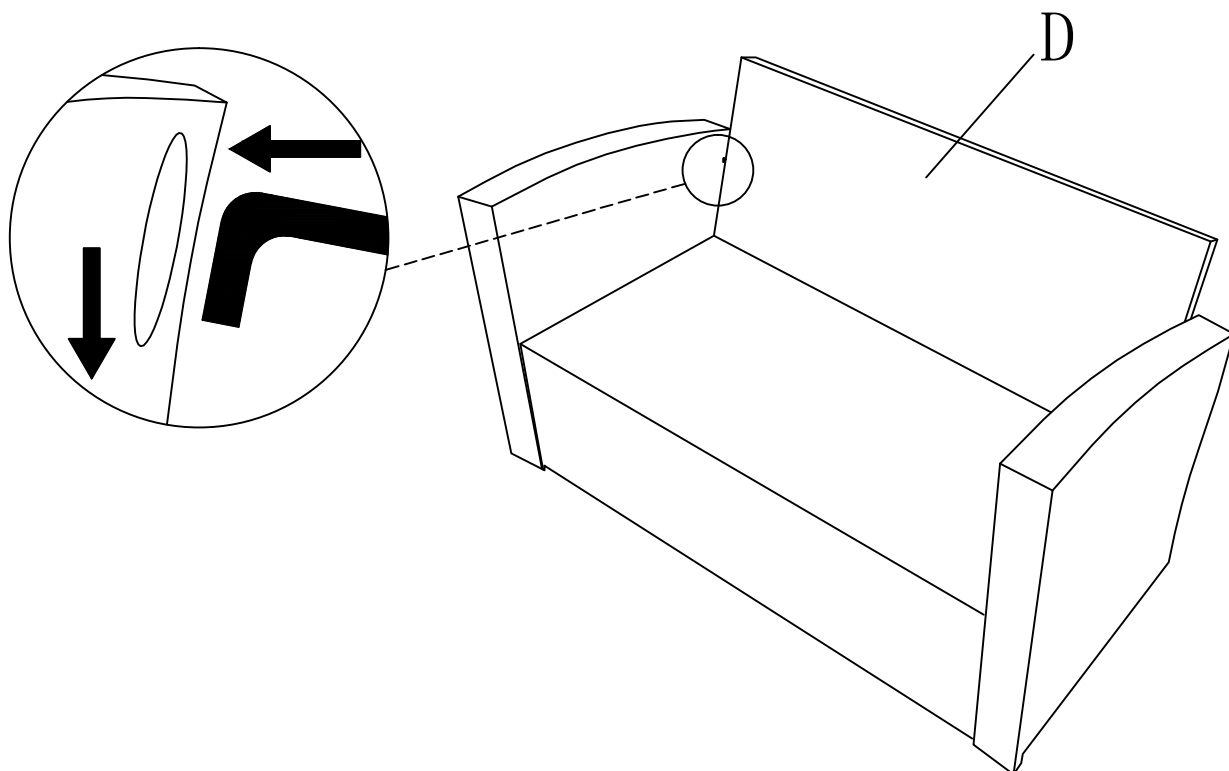


Double Sofe


4

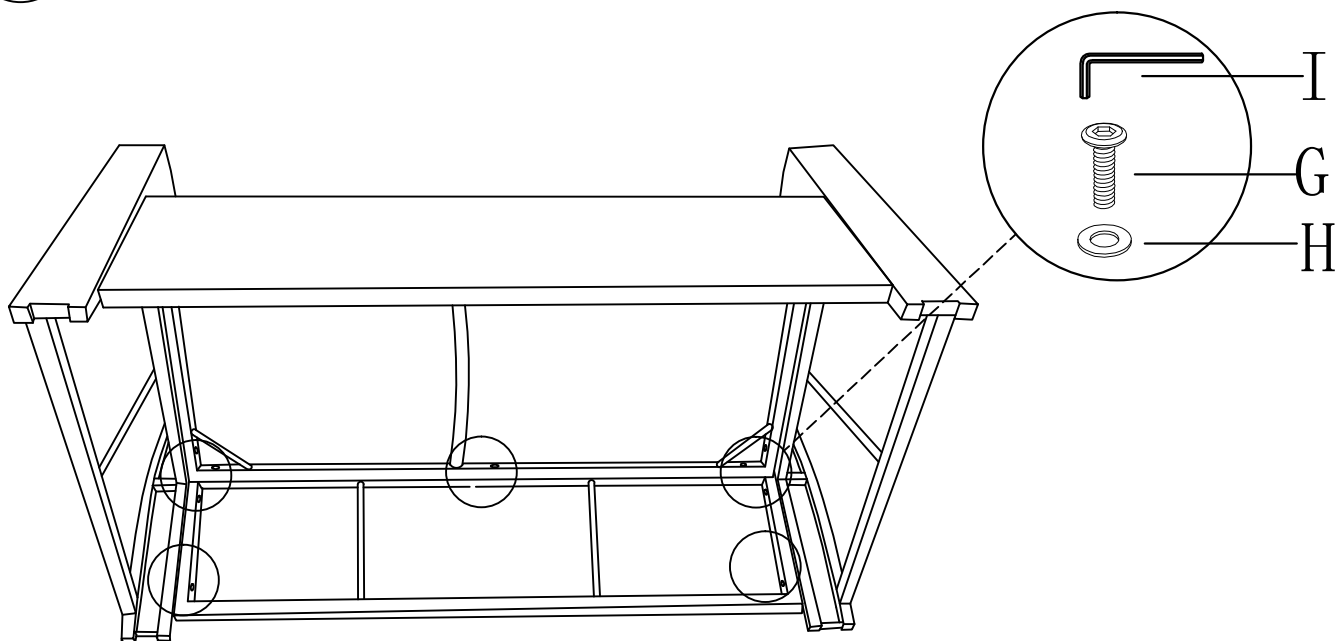


Double Sofe

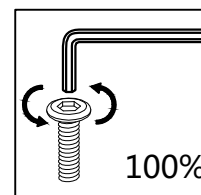


5

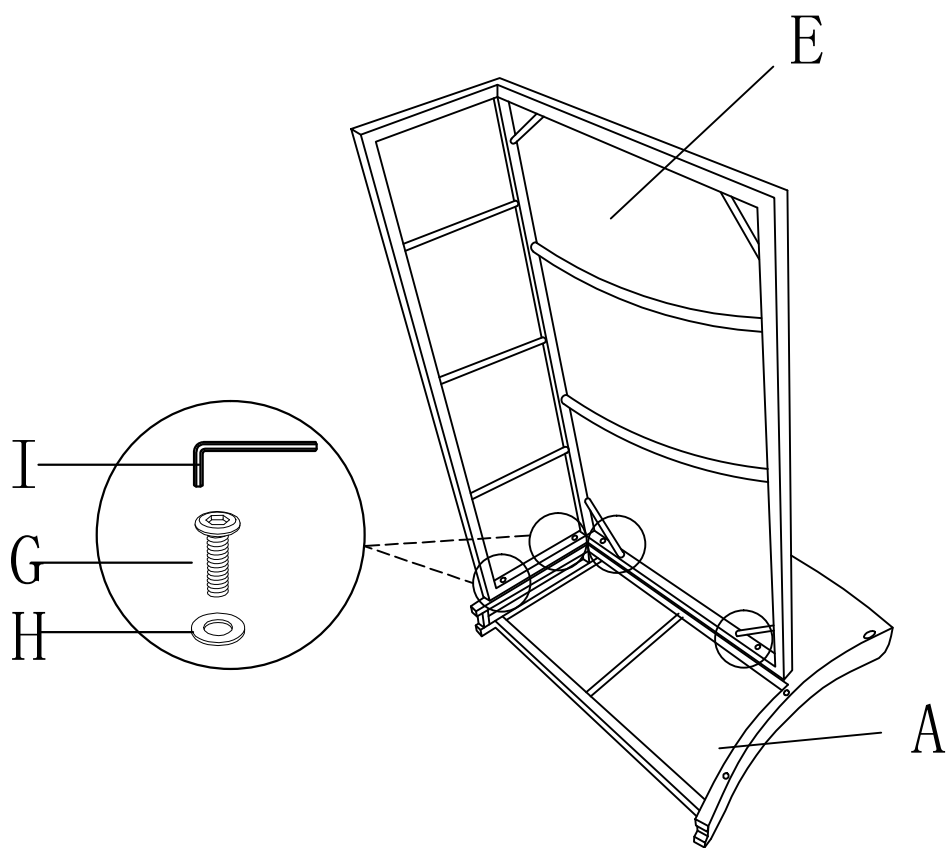


Three-Person Sofa

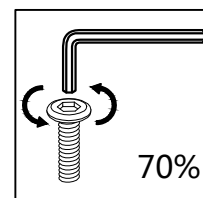


6

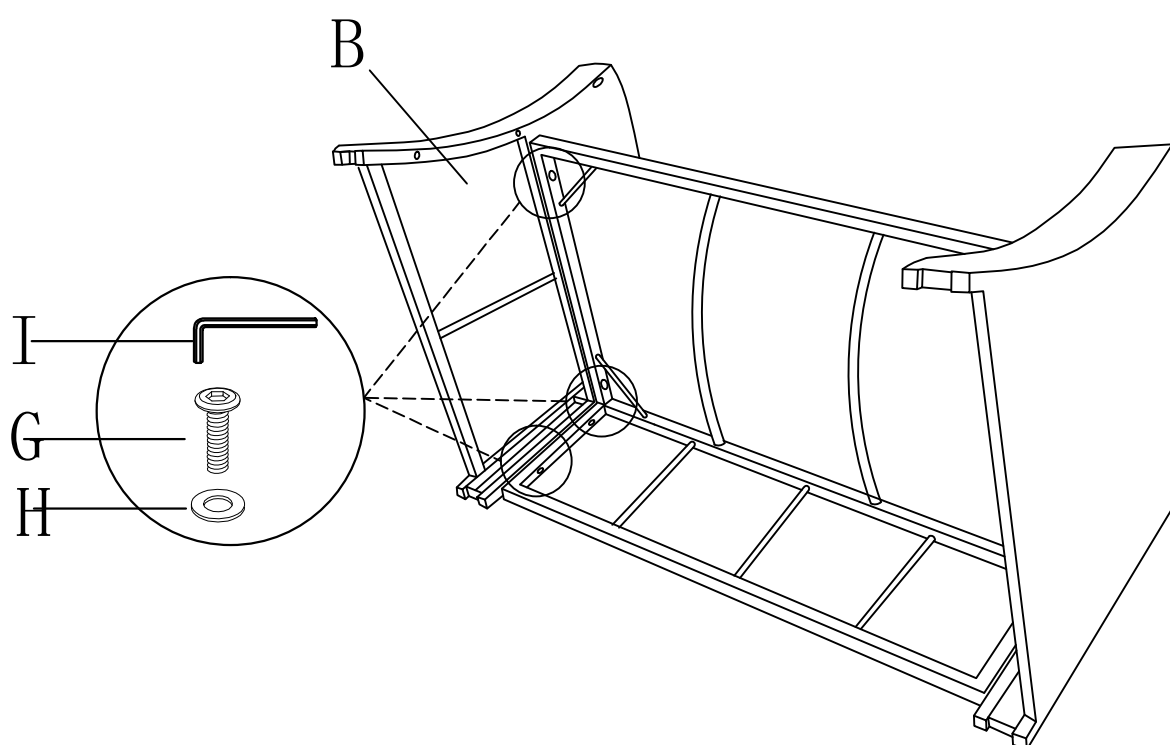

Three-Person Sofa

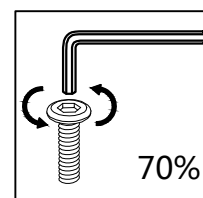


7

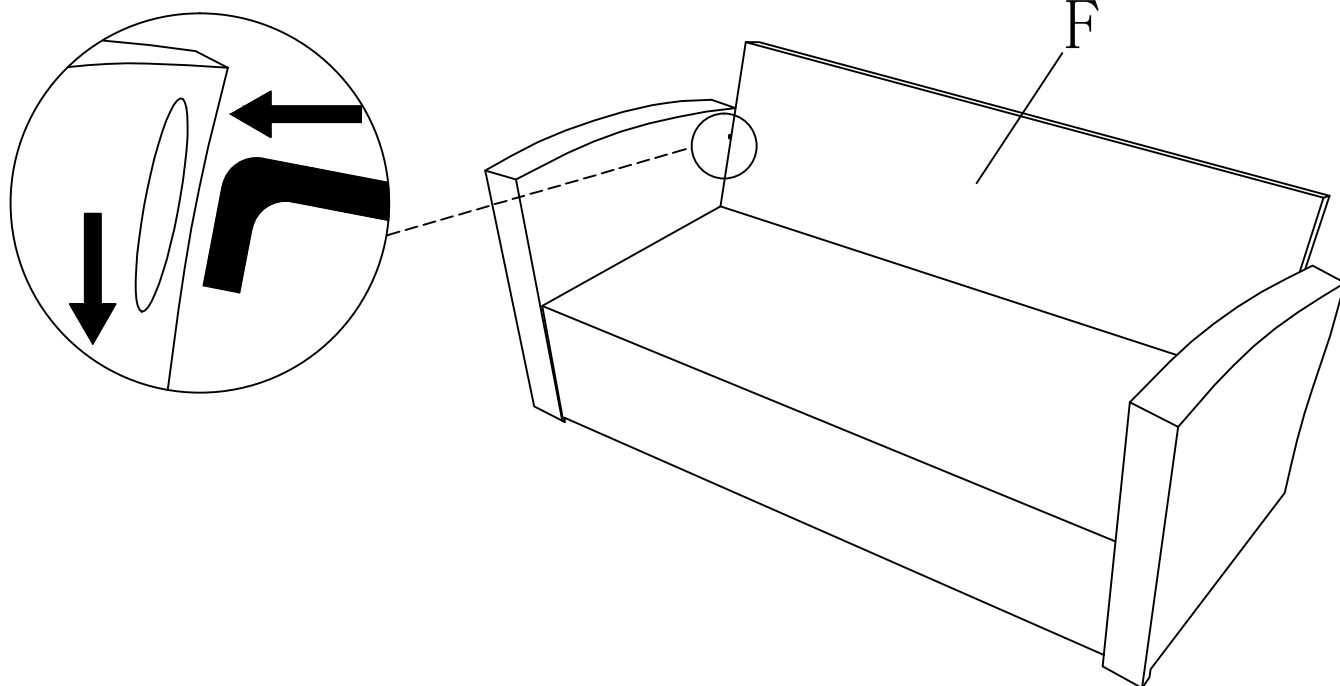


Three-Person Sofa





8


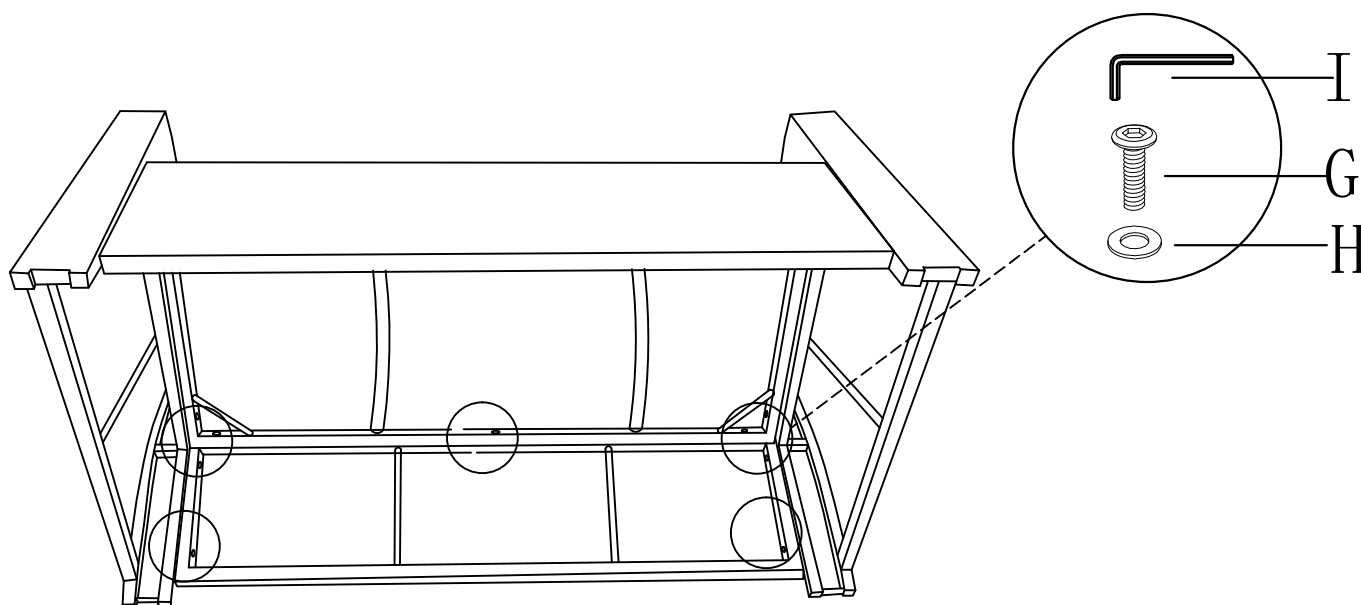






Three-Person Sofa




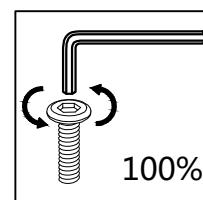




Assembly Instruction

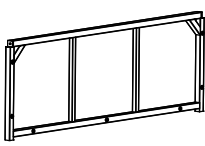A	X1	B	X1	C	X1	D	X2
							
Left Side panel		Right Side panel		After Side panel		Bottom Side panel	



E	X1	F	X1	G	X1	H	X2
							
Front Side panel		Top Side panel		Rain Shield		Side panel	

I	X1	J	X1	K	X1	L	X1
							
After Side panel		Bottom Side panel		Front Side panel		Top Side panel	



M	X1	N	X8	O	X26	P	X34
							
Rain Shield		M6x20mm		M6x40mm		M6	

Q	X4	R	X4	S	X8	T	X1
							
M6 T=2		M6 T=9		M6		M6	




Assembly Instruction

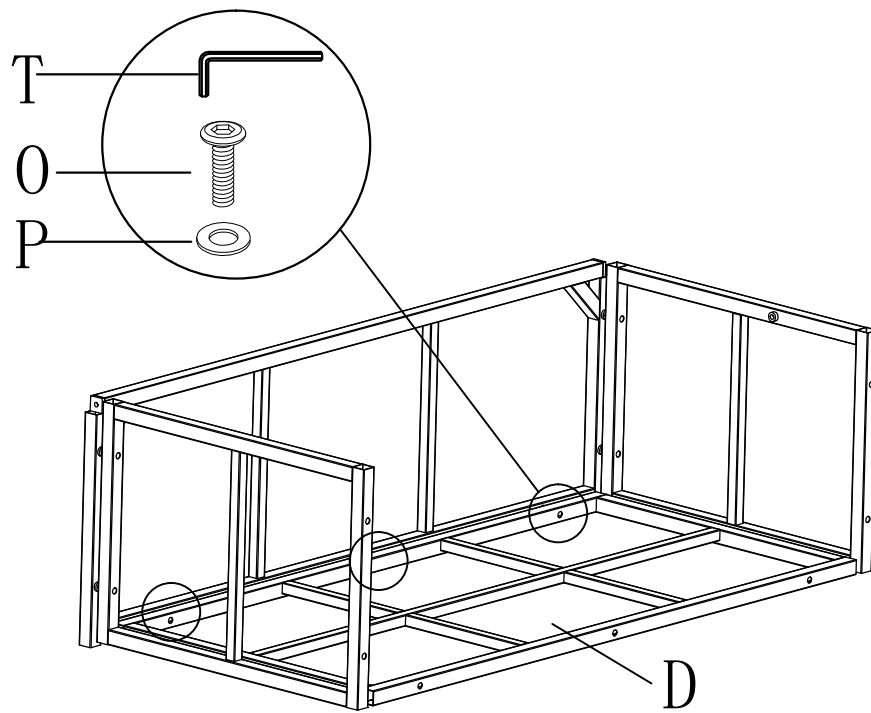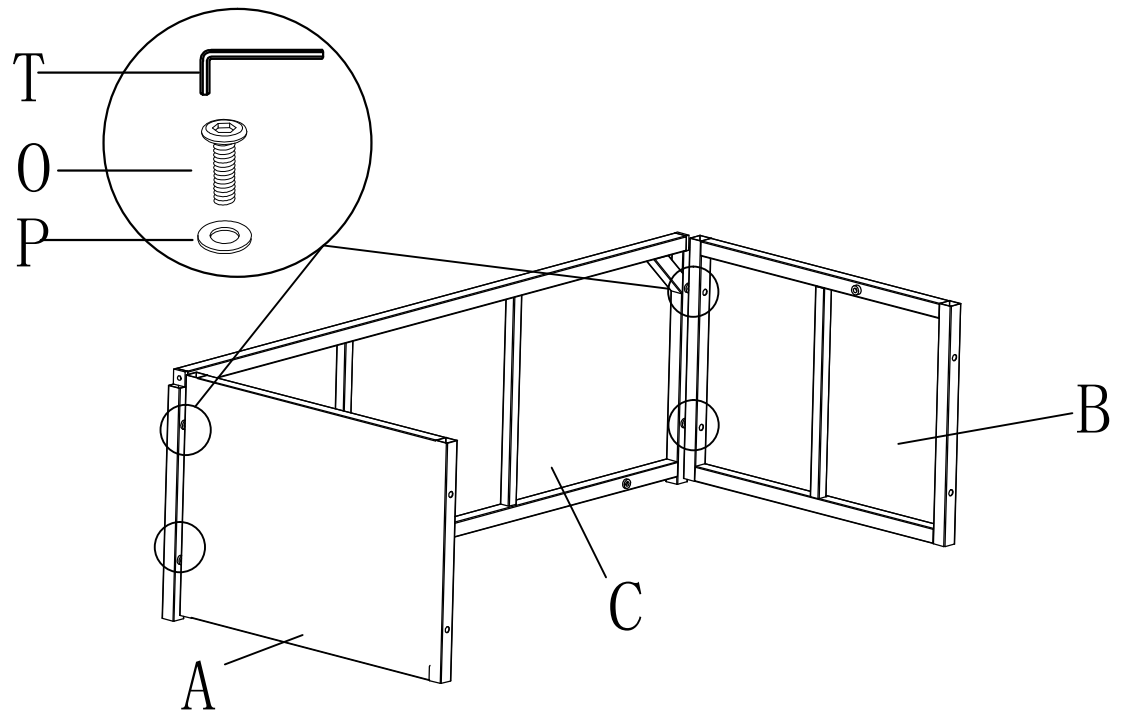



Assembly Instruction

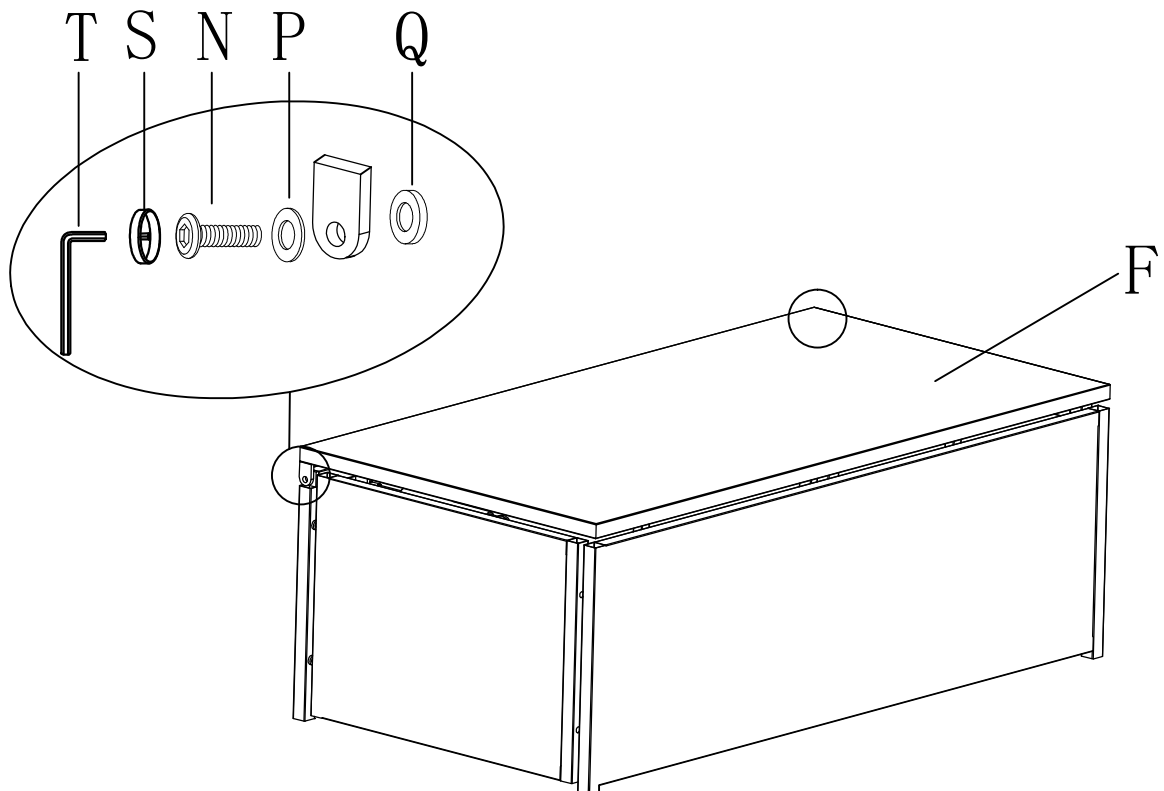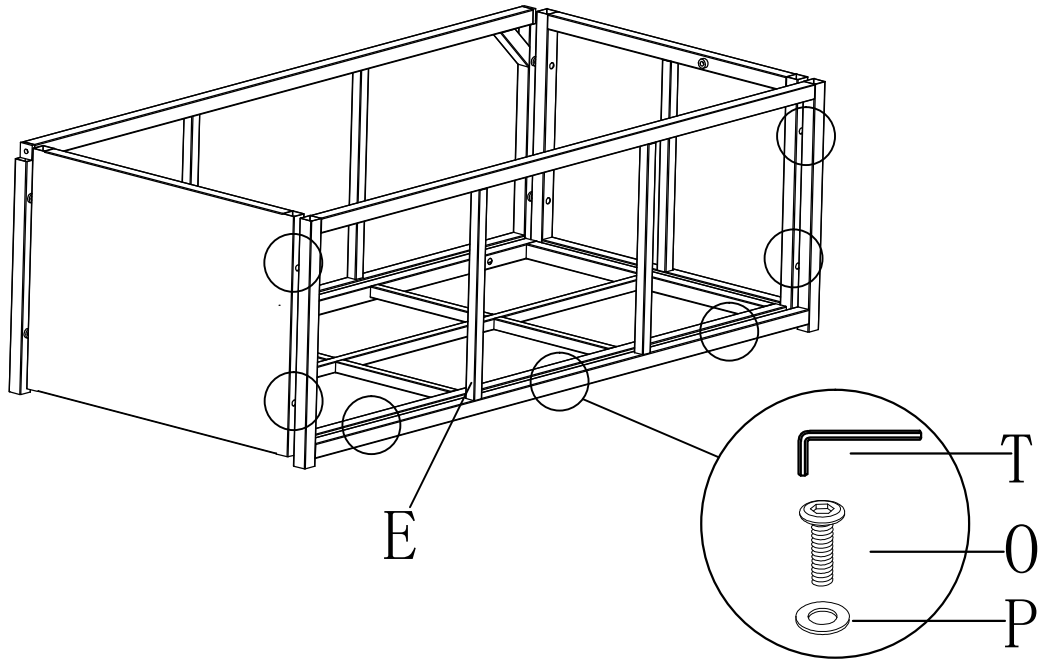



Assembly Instruction

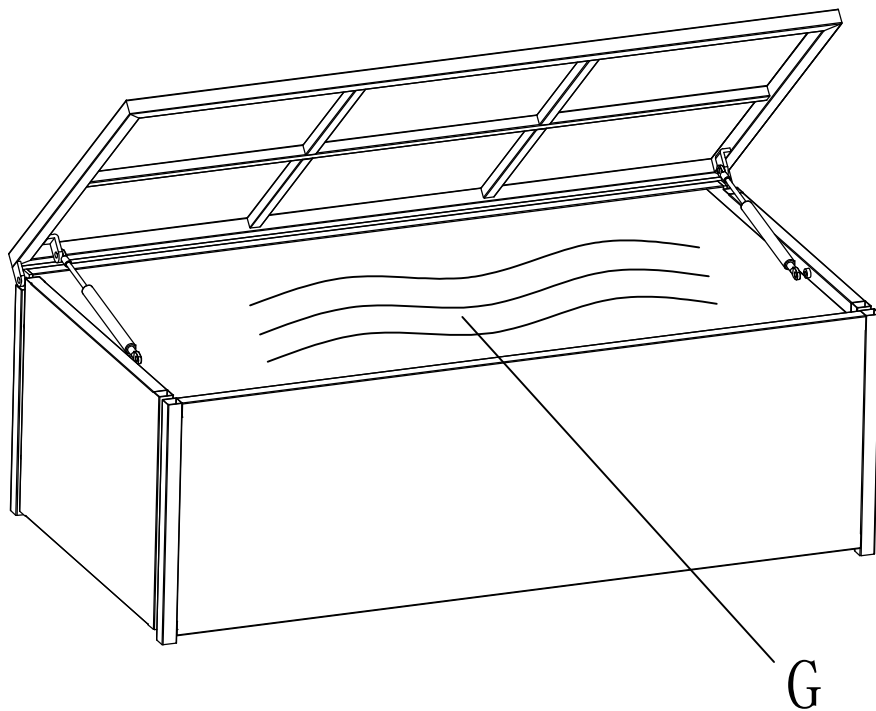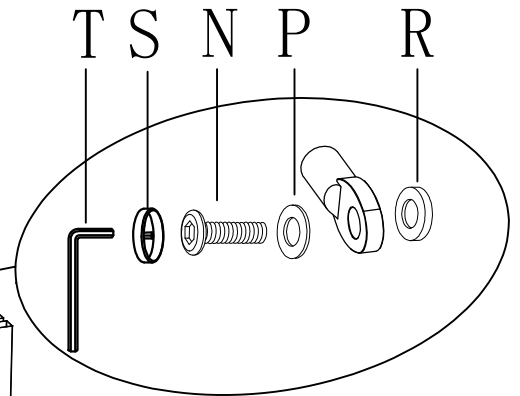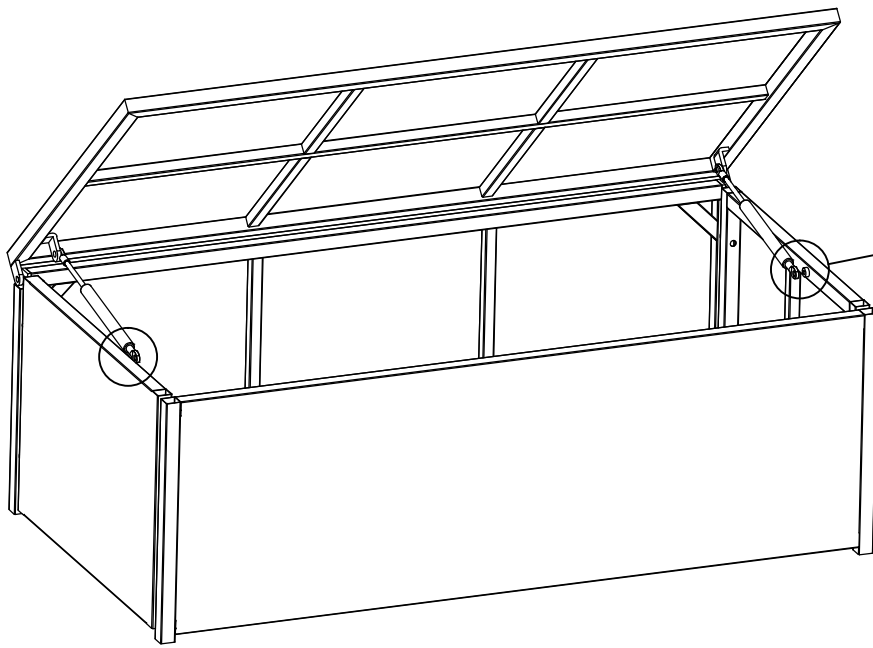



Assembly Instruction

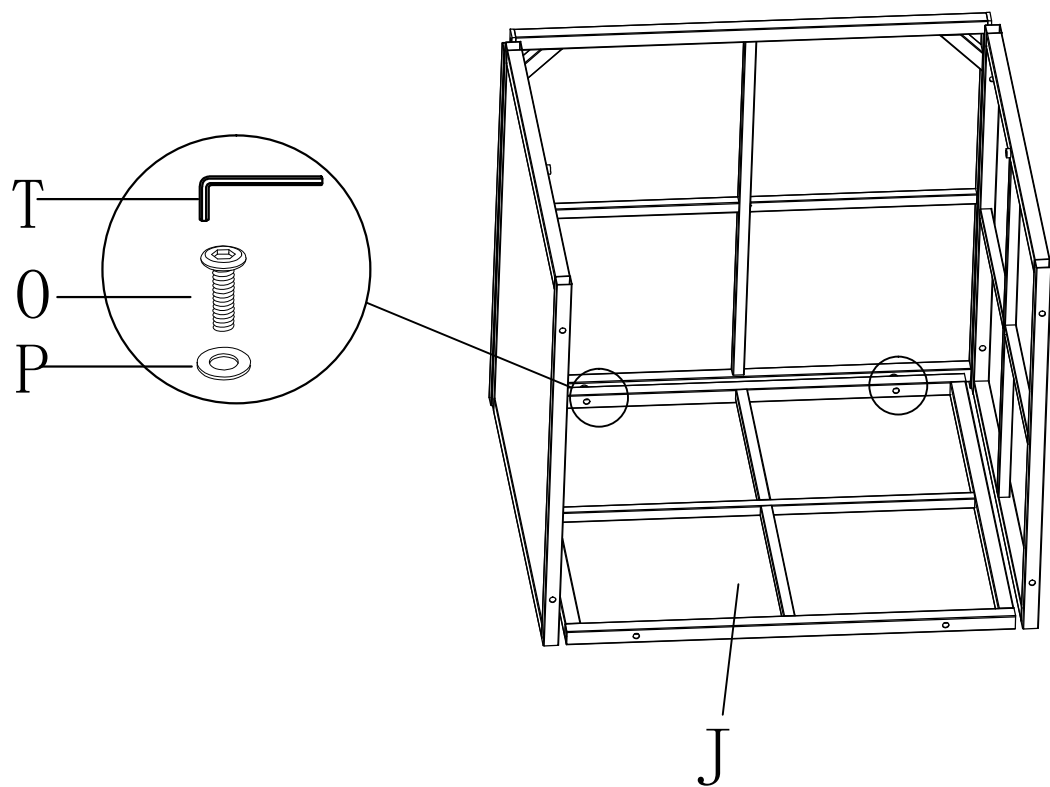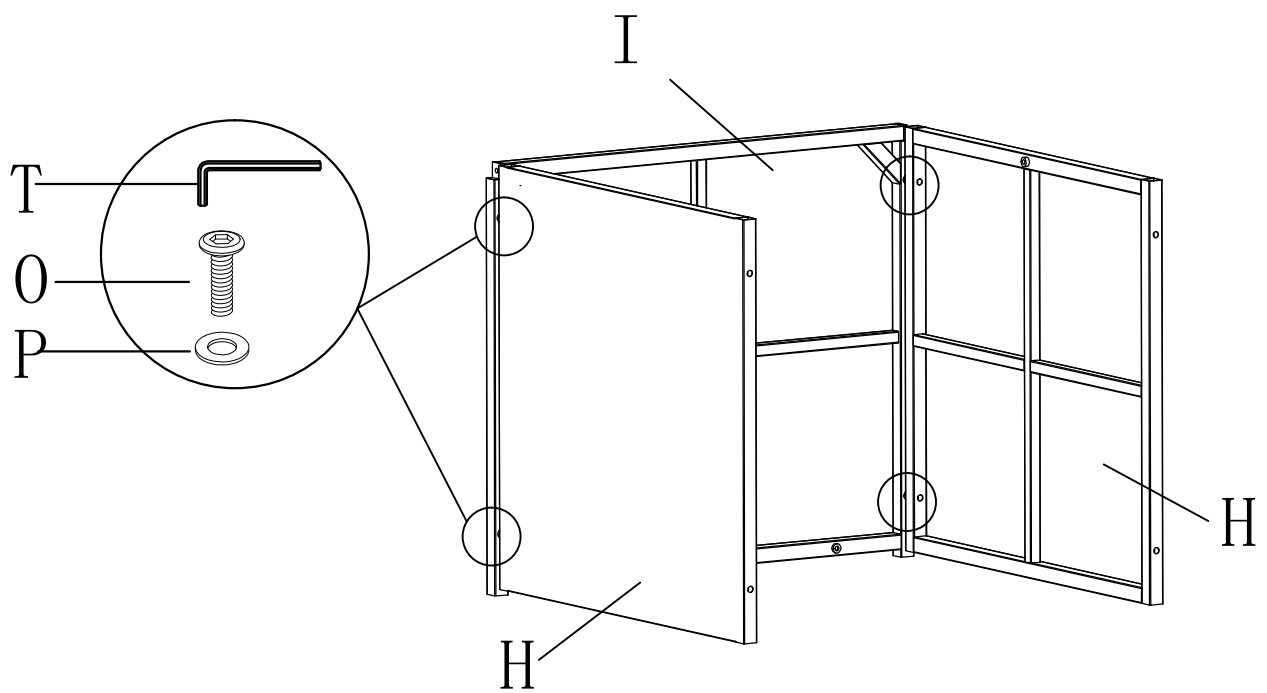




Assembly Instruction


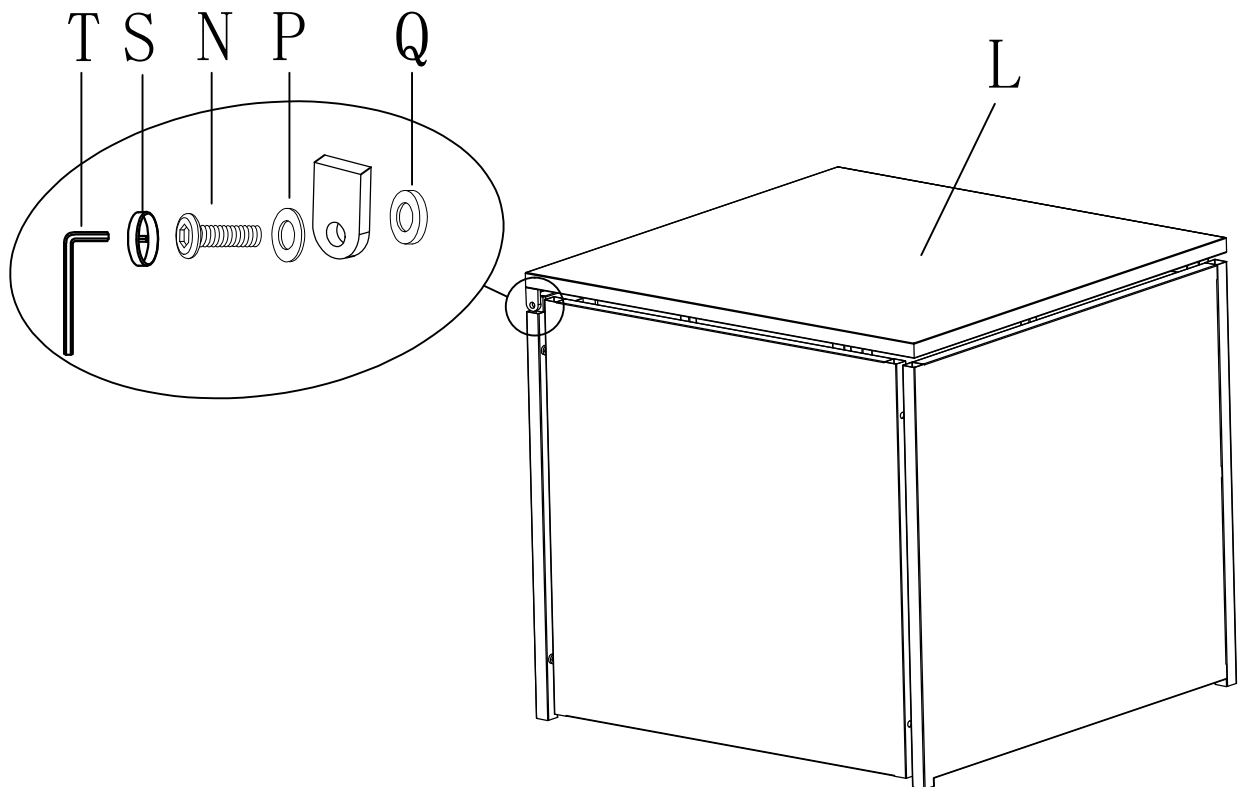
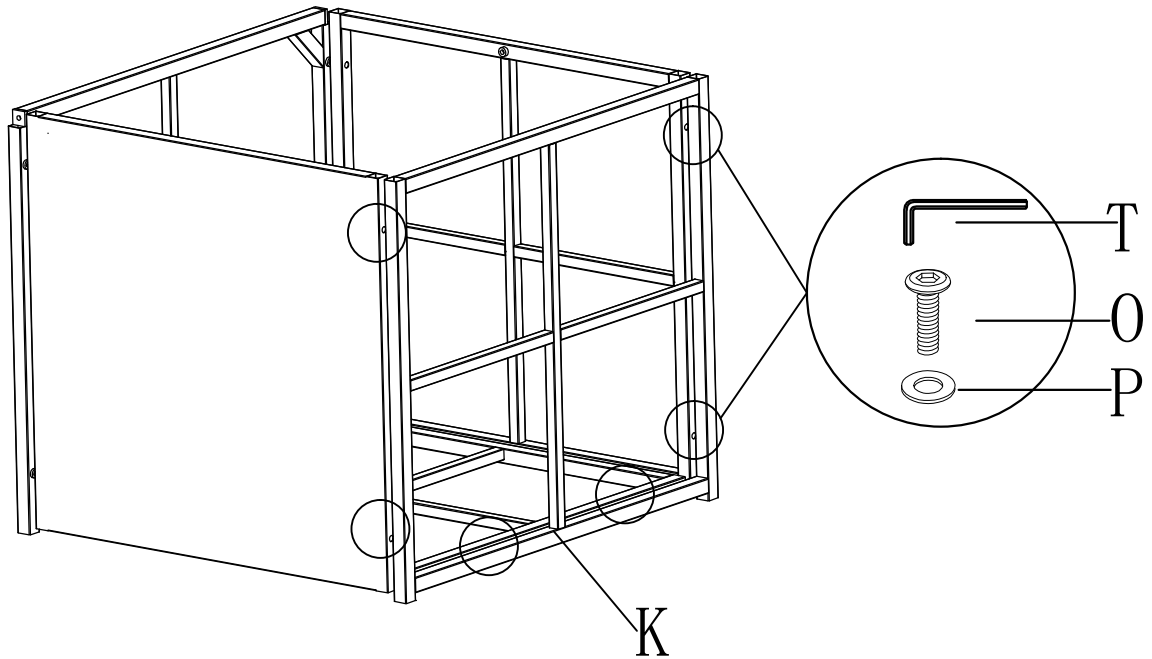



Assembly Instruction

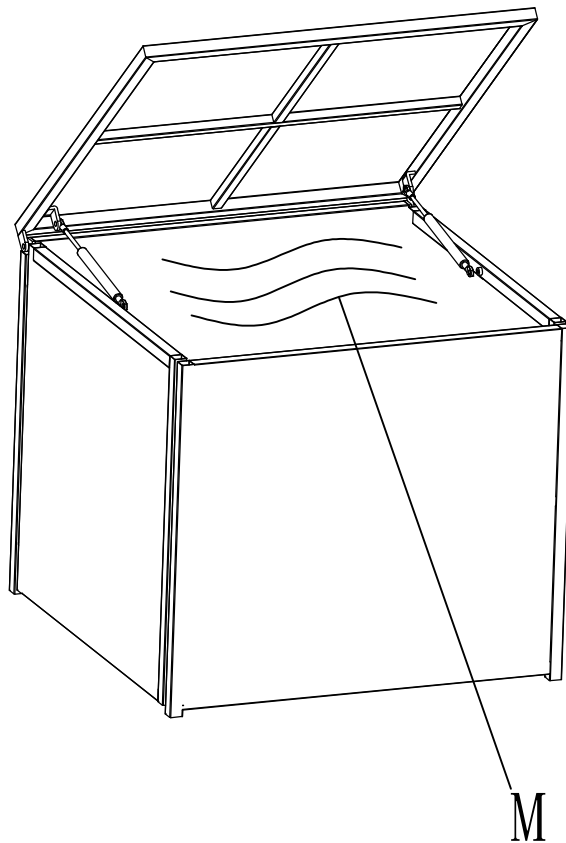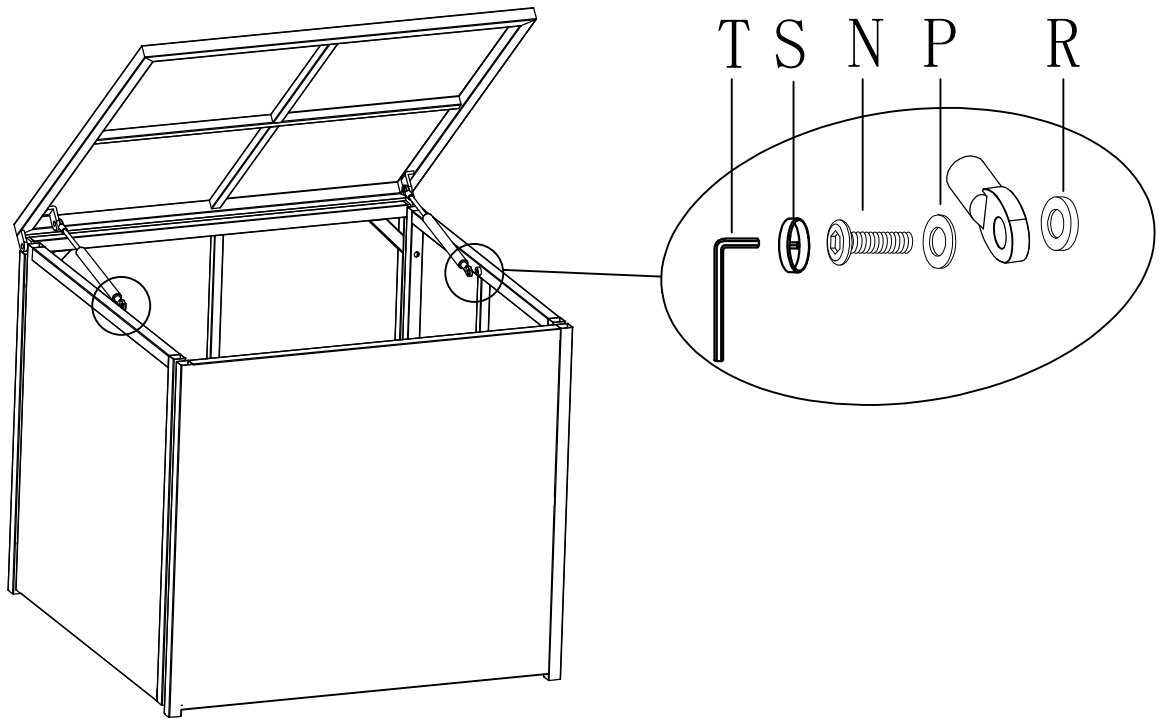


Assembly Instruction

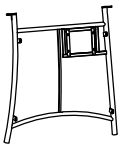A	X1	B	X1	C	X1	D	X1
							
Table Top		Leg		Leg		Side panel	



E	X1	F	X1	G	X20	H	X20
							
Side panel		Leg Brace		M6x20mm		M6	

I	X16	J	X4	K	X1	L	X1
							
M6							



M	X2	N	X2	O	X1	P	X8
							

Q	X1						
							

Assembly Instruction

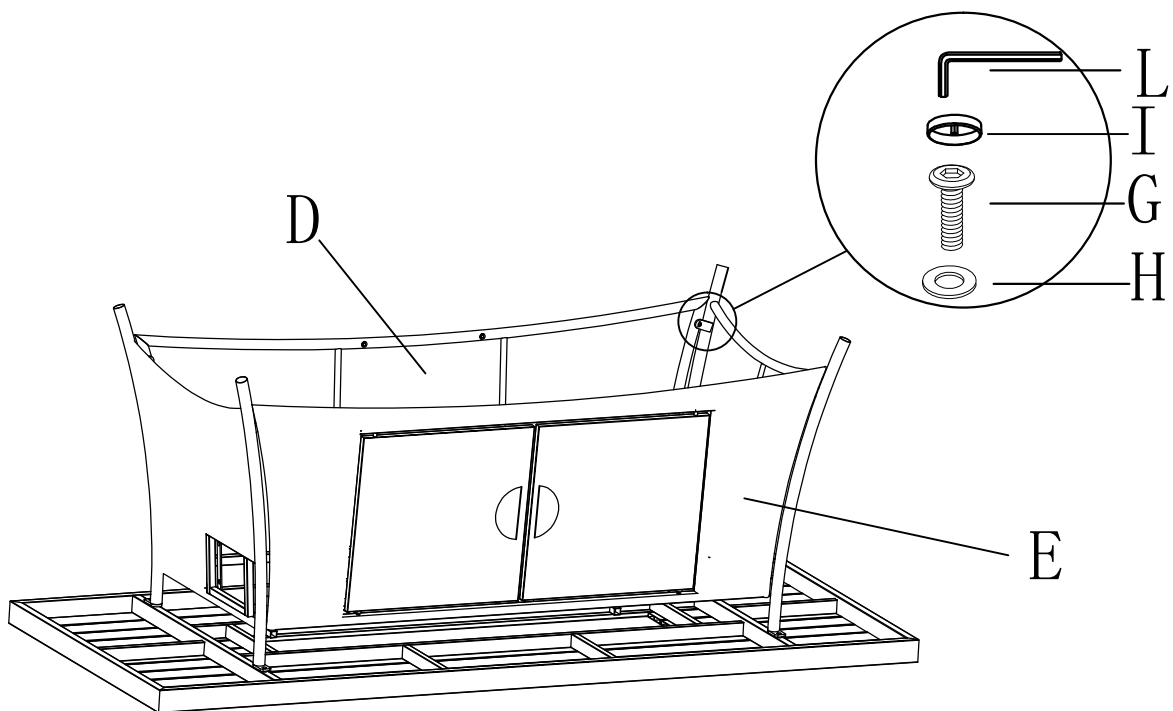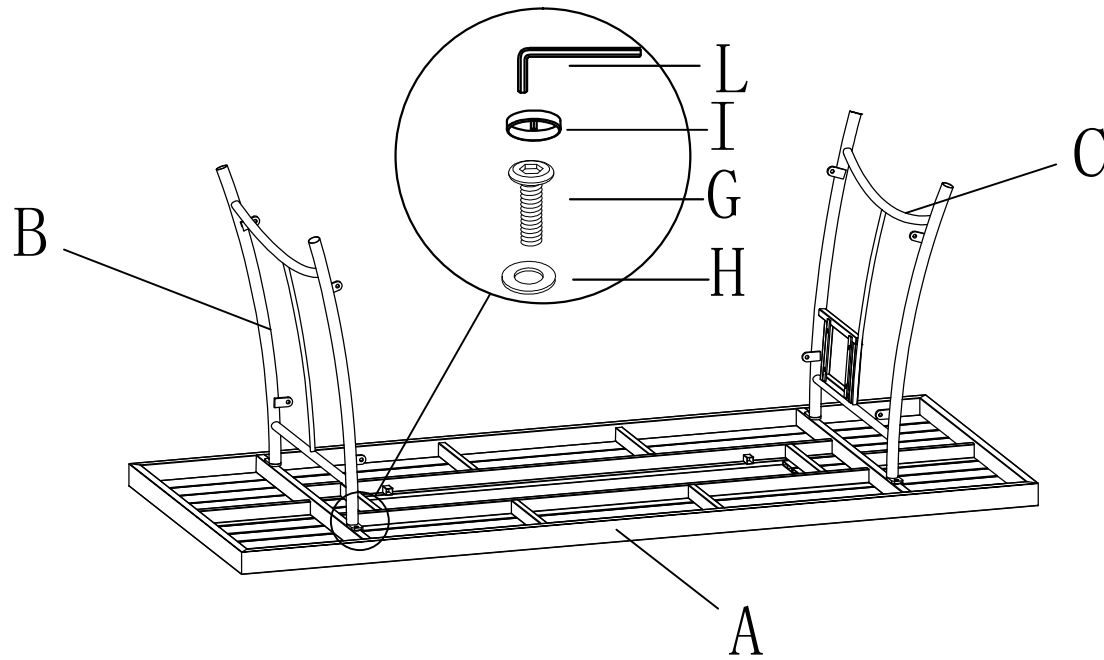

Assembly Instruction

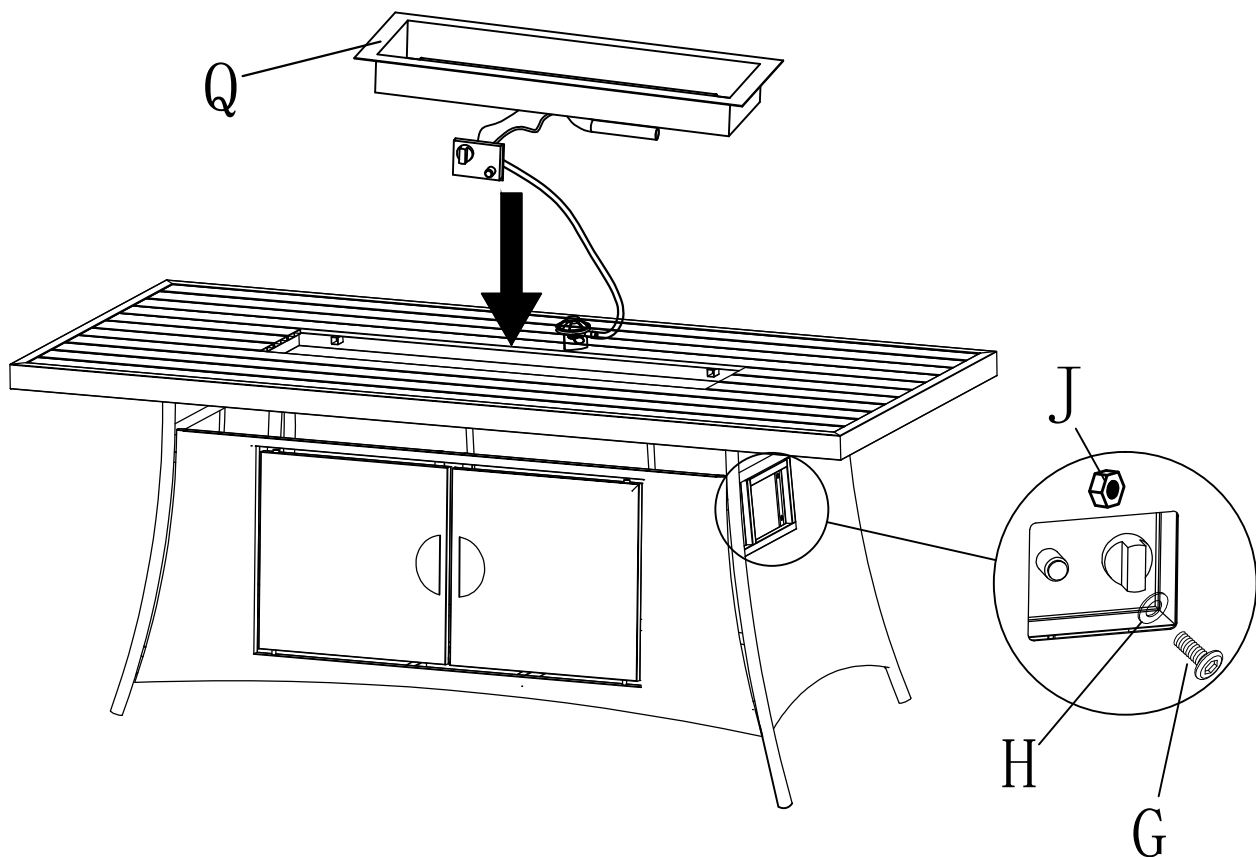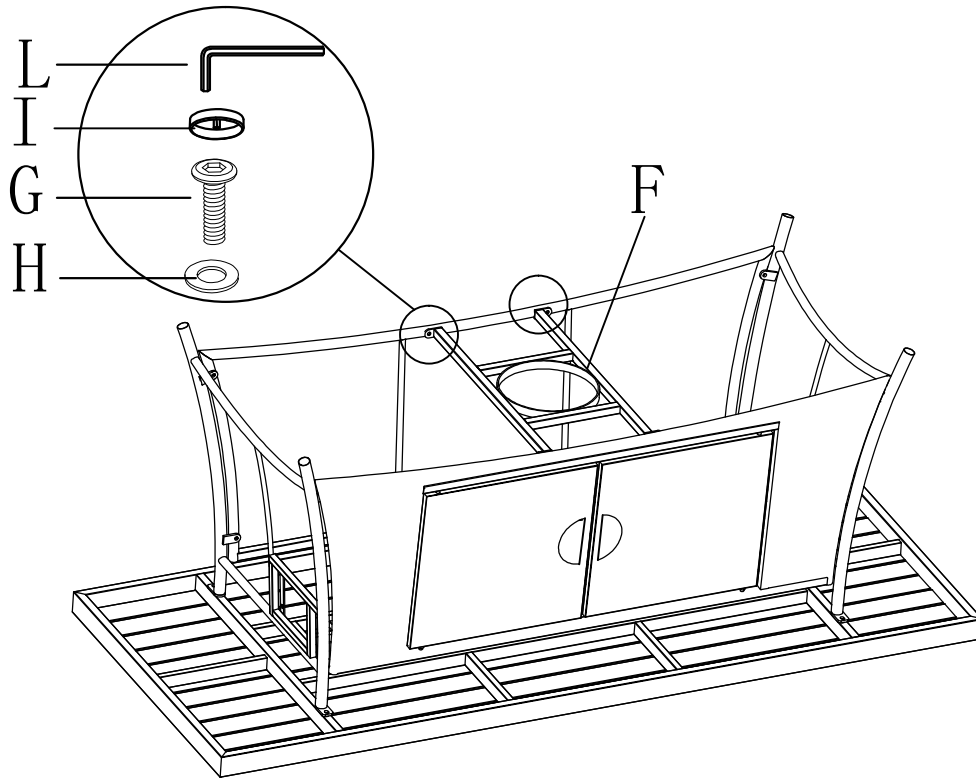

Assembly Instruction

